




REAR TORSION FTG/PPF LOW HEADROOM BRACKET SINGLE TRACK REAR TORSION INSTALLATION INSTRUCTIONS

Part No. OT4031 & 4032

INSTALLATION STEPS

1. Mount LHR brackets on horizontal tracks as per diagram below.

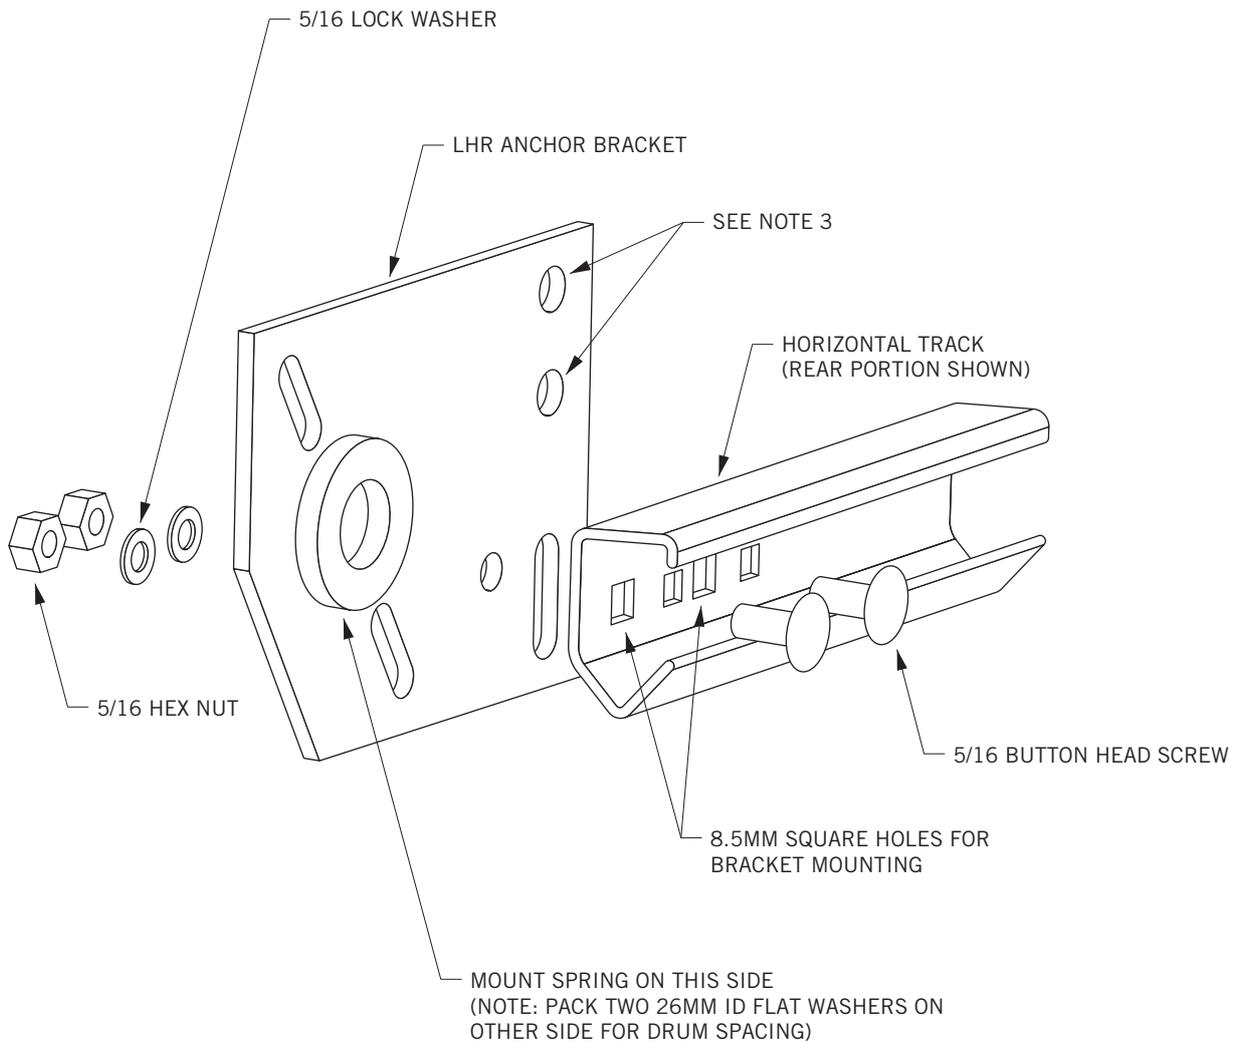

NOTE

- (1) Left hand mounting shown only.
- (2) Use perforated angle lines to strengthen middle portion of horizontal tracks if door weight is over 100kg.
- (3) Extra holes provided on bracket for strengthening if door weight is over 120kg.

2. Mount torsion bar, spring/s and cable drums as normal.

DISCLAIMER

**THESE INSTRUCTIONS ARE INTENDED FOR PROFESSIONAL GARAGE DOOR INSTALLERS
and only apply to the fittings**

Note: All references are taken from inside looking out

