

# GRIFCO

## Receiver Card (RRC2) Manual

Rev: 801140

### START BY READING THESE IMPORTANT SAFETY RULES

**WARNING: Important safety instructions. It is important for the safety of persons to follow all instructions. Save these instructions.\***



Disconnect power before installation. Device must be properly grounded and connected in accordance with local electrical codes.



Do not allow children to play with controls. Keep remote controls away from children;



All electrical connections must be made by a qualified person.




Activate device only when any moving parts are a safe distance from any persons or animals.

## INTRODUCTION

This Remote Receiver Card (RRC2) is compatible with Chamberlain Rolling or Billion code transmitters. The first transmitter learnt will set the receiver to Rolling or Billion code operation. To change from Rolling to Billion code or vice versa perform a bulk erase and learn the desired transmitter.

This device would typically be used to activate any device via the onboard relay and terminal block. The RRC2 must have 24VAC/DC supply in order to operate.

This device can be set to either momentary or latch via the MO jumper (Fit to DISABLE momentary operation).

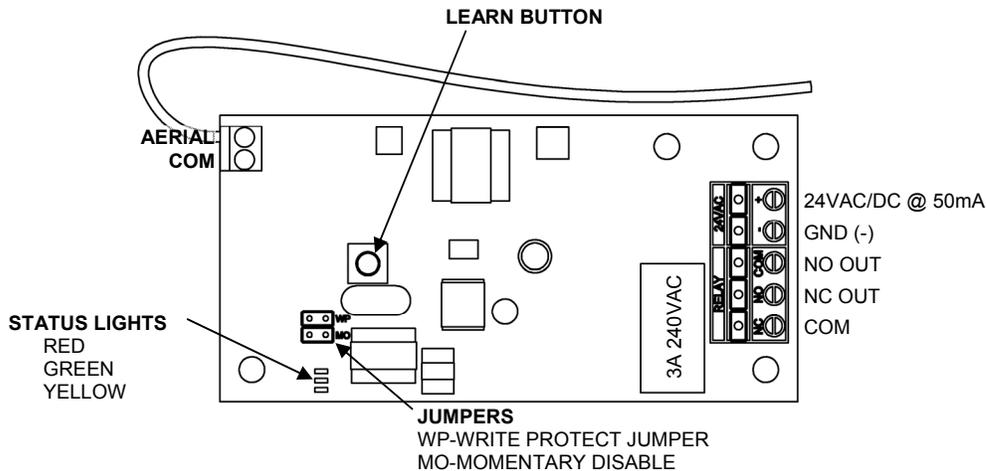


## OPERATION

### Onboard Button Single Learn

NOTE: Ensure that the receiver card write protect jumper is removed before turning on power. If not, turn off power, remove jumper and then turn power on.

- Press the LEARN BUTTON on the receiver card, red light will come on
- Activate desired TRANSMITTER (or accessory), green light will flash
- Repeat process until all required transmitters have been learnt.
- Turn off power, install write protect jumper & turn on power.

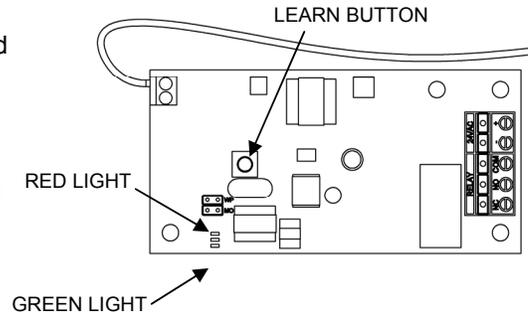

### Onboard Button Bulk Erase




**WARNING**  
When accessing LEARN BUTTON mains supply is present. Procedure should only be carried out by a qualified electrician

NOTE: Ensure that the receiver card write protect jumper is removed before turning on power. If not, turn off power, remove jumper and then turn power on.

WARNING: THIS BULK ERASE PROCEDURE REMOVES ALL TRANSMITTERS FROM THE RECEIVER

- Press and hold the LEARN BUTTON on the receiver card until red light goes out (approximately 10 seconds).
- Turn off power, install write protect jumper & turn on power.

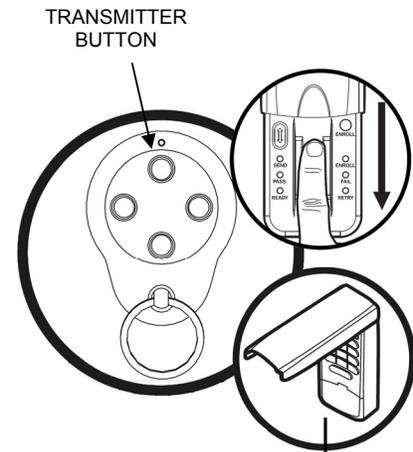

Keypad compatible with RRC2 with BLUE dot attached and only allows personalised entry

## RANGE

The operating range will depend largely on the surrounding environment in terms of the structure that surrounds the Receiver Card and also other radio frequencies used in the area. Before learning bulk quantities of transmitters, ensure that the performance is satisfactory. Some installations require that the aerial wire protrudes out of the main control enclosure base through a small hole (approx. 2-3mm diameter).

## MOMENTARY DISABLE (MO)

The momentary (MO) jumper sets how the receiver will respond to the learning transmitters. With the jumper off, the receiver output will stay on for as long as a signal is received. With the jumper on, the receiver output relay state will change each time a signal is received.

Momentary Operation (Jumper NOT installed); eg. activate door operator (pulse signal)  
Momentary Disabled Operation (Jumper installed); eg. turning on/off a light or siren

To alter this setting:

- Turn off power to the device
- Either fit or remove the momentary (MO) jumper located on the RRC2
- Turn power on to the device.

## LIGHT STATUS CHART

RED Light	GREEN Light	STATUS
OFF	ON	Transmitter has just been learnt
Flashing Slow	ON	Receiver has detected a signal from a learnt transmitter
Flashing Slow	OFF	Receiver has detected a signal from a transmitter not learnt
Flashing Fast		Receiver has detected a signal from a transmitter, but is in Write Protect mode

The yellow light shows the current RRC output status.

## TROUBLESHOOTING

- Unit will not enter learn mode (red light does NOT come on)
  - Write Protect jumper could be installed. If installed, turn off power, remove jumper and then turn power on.*
  - If no lights come on check that power is being supplied to RRC2*
- Unit will enter learn mode (red light comes on) but green light does not come on when transmitter button is pressed and transmitter button is not learnt.
  - Incompatible transmitter. RRC2 may be set to billion code and transmitter is rolling code or vice versa. To check that the transmitter can be learnt to RRC2, when a compatible transmitter button is pressed the red light on the RRC2 should flash.*

## NOTES

## CHAMBERLAIN 24 MONTH LIMITED WARRANTY

(Excluding electric motors)

Chamberlain Australia Pty Limited / Chamberlain New Zealand Limited (**Seller**) warrants to the original purchaser of the Grifco product (**Unit**) that it is free from defects in material and/or workmanship for a period of 24 months from the date of first purchase from the Seller.

If, during the limited warranty period, the Unit fails due to defects in materials or workmanship Chamberlain will, provided the defective part or Unit is returned freight and insurance prepaid and well packaged to the nearest Chamberlain office, undertake to repair or, at its option, replace any defective part or Unit and return it to the Buyer at no cost. Repairs and replacement parts are warranted for the remaining portion of the original warranty period.

### **Limited warranty on electric motors - 12 months**

In keeping with the manufacturer's warranty, Chamberlain offer a 12 month warranty on all electric motors from the date of purchase. We will furnish a replacement motor free of charge, if it is found to be defective. Labour costs may apply.

Where the Unit has been installed by an authorised installer, Chamberlain will furnish replacement parts free of charge through the authorised installer. Warranty is based on the electric motor/operator being used in conjunction with controls supplied (or other controls authorised in writing prior to installation) by Chamberlain.

### **In-warranty service**

During the warranty period, if the product appears as though it may be defective, call our technical department before removal of the unit. A Chamberlain technician will diagnose the problem and promptly supply you with the parts for "do-it-yourself" repairs, or provide you with shipping instructions for a factory repair or replacement.

If our service centre determines that a warranty claim has been made in respect of a failure or defect arising under or out of any exclusion set out below, we may charge you a fee to repair and/or return the unit to you.

### **Exclusions**

This warranty does not cover any failure of the Unit due to:

1. non-compliance with the instructions regarding installation, operation, maintenance and testing of the Unit or of any product with which the Unit is used.
2. any attempt to repair, dismantle, reinstall or move the Product to another location once the Product is installed by any person other than an authorised installer.
3. tampering, neglect, abuse, wear and tear, accident, electrical storm (force majeure), excessive use or conditions other than normal commercial use.

This warranty does not cover any problems with, or relating to, the commercial door or door hardware, including but not limited to the door slats, door springs, door drum, door alignment or hinges, any problems caused by electrical faults or labour charges for reinstalling a repaired or replaced Unit.

### **Liability – Australia only**

Under no circumstances shall the Seller be liable for consequential, incidental or special damages arising in connection with the use, or inability to use, the Unit. In no event shall the Seller's liability for damages or injury arising from breach of law or contract or for negligence, exceed the cost of repairing or replacing the Unit or refunding the purchase price of the Unit.

Under Division 2 Part V of the *Trade Practices Act, 1974*, certain warranties and conditions (**Implied Terms**) are implied into contracts for the supply of goods or services if the goods or services are of a kind ordinarily acquired for personal, domestic or household use or consumption. Liability for breach of those Implied Terms cannot be excluded or limited and the limitations and exclusions above do not apply to the Implied Terms.

Except for the Implied Terms and the warranties set out above, the Seller excludes all warranties and conditions implied by statute, at law, in fact or otherwise.

### **Liability – New Zealand only**

Except as set out in the *Fair Trading Act 1986* and the *Consumer Guarantees Act 1993*:

- (a) all other guarantees, warranties and representations in relation to the Unit or its supply are excluded to the extent that the Seller can lawfully exclude them; and
- (b) under no circumstances shall the Seller be liable for consequential, incidental or special damages arising in connection with the use, or inability to use, the Unit, other than those which were reasonably foreseeable as liable to result from the failure.

Chamberlain reserves the right to change the design and specification without prior notification. Some features or accessories may not be available in certain markets or areas.

**Australia**  
**Phone toll free 1800 GRIFCO (474 326)**

**New Zealand**  
**Phone toll free 0800 653 667**